DECKVEST **SOLAS**

spinlock

DONNING PROCEDURE

1

PUT ON AS A JACKET AND FASTEN FRONT BUCKLE TOGETHER

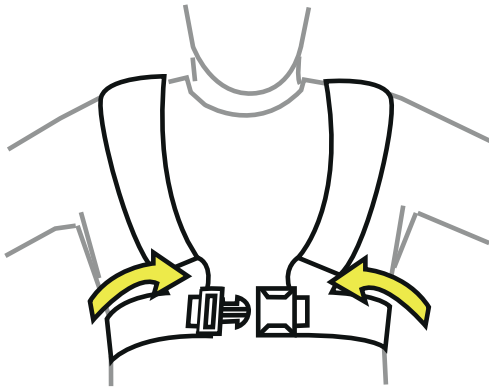

2

PULL THE SIDE BELT WEBBING TIGHT AND ROLL UP REMAINING WEBBING IN THE HOLDER

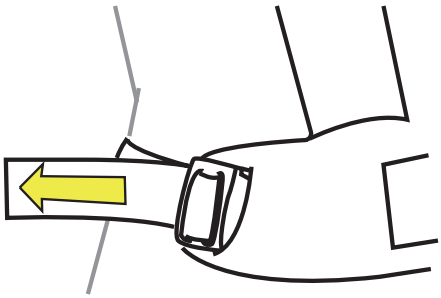

3

ATTACH CROTCH STRAP BY PASSING THROUGH LEGS AND FASTENING PLASTIC BUCKLE TOGETHER ON THE FRONT.

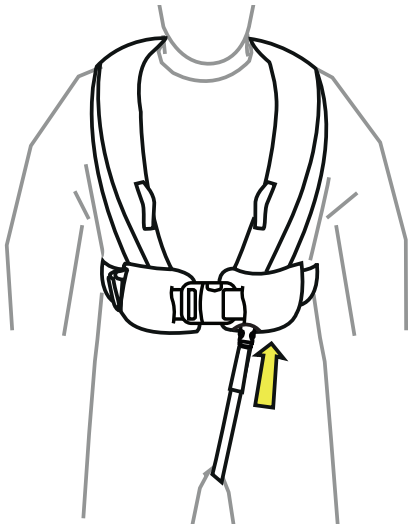

WARNING - WHEN NOT CORRECTLY FITTED, THIS PRODUCT MAY NOT PERFORM AS A LIFEJACKET. CHECK BEFORE USE.

SPINLOCK.CO.UK